**Hertzog Splice**

Running Splice for (e.g.) trapeze adjuster line.
Using 2.5 mm rope - Hertzog/ Lightening/ or Holt Pro-Line.

**Option 1 - Using Fid**

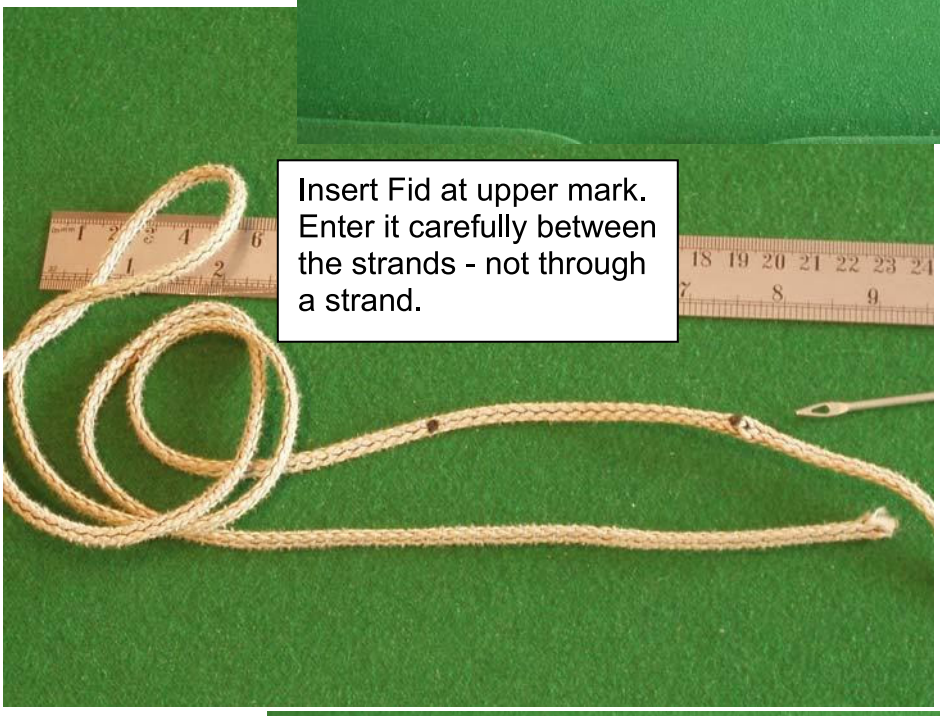


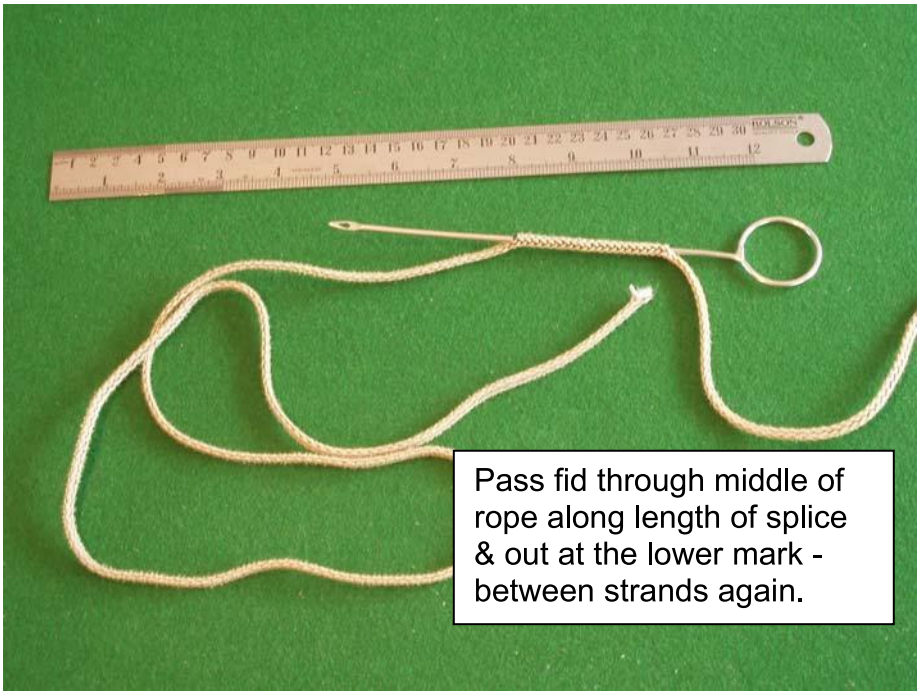

Attach end of rope to Fid - I find it easier to use tape than try to fit it into the eye of the Fid. Leave a gap between the end of the fid and the end of the Fid to make it easier to pull through the rope.

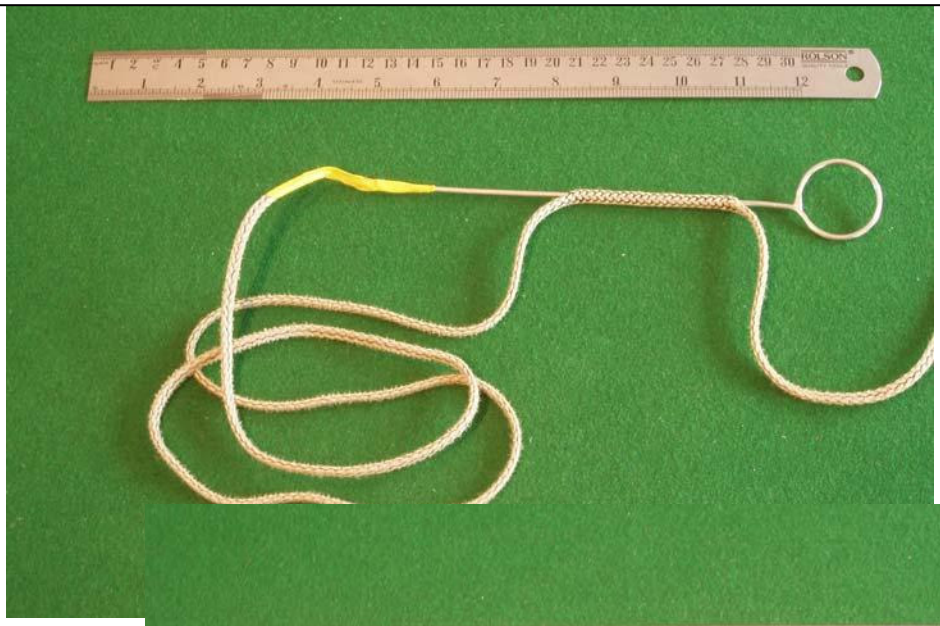

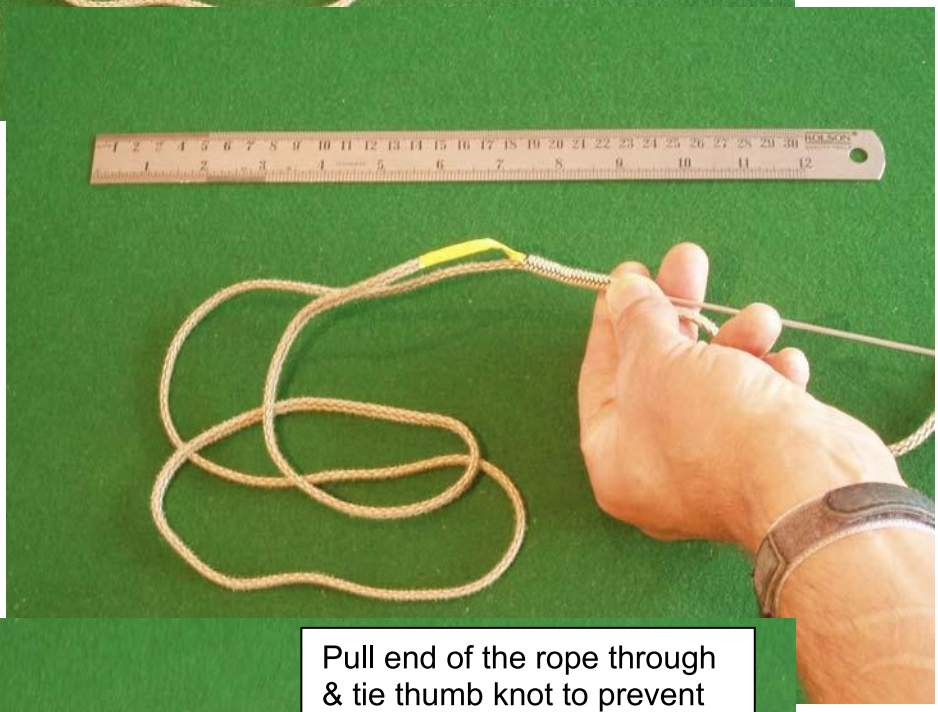

Pull end of the rope through & tie thumb knot to prevent losing the end.

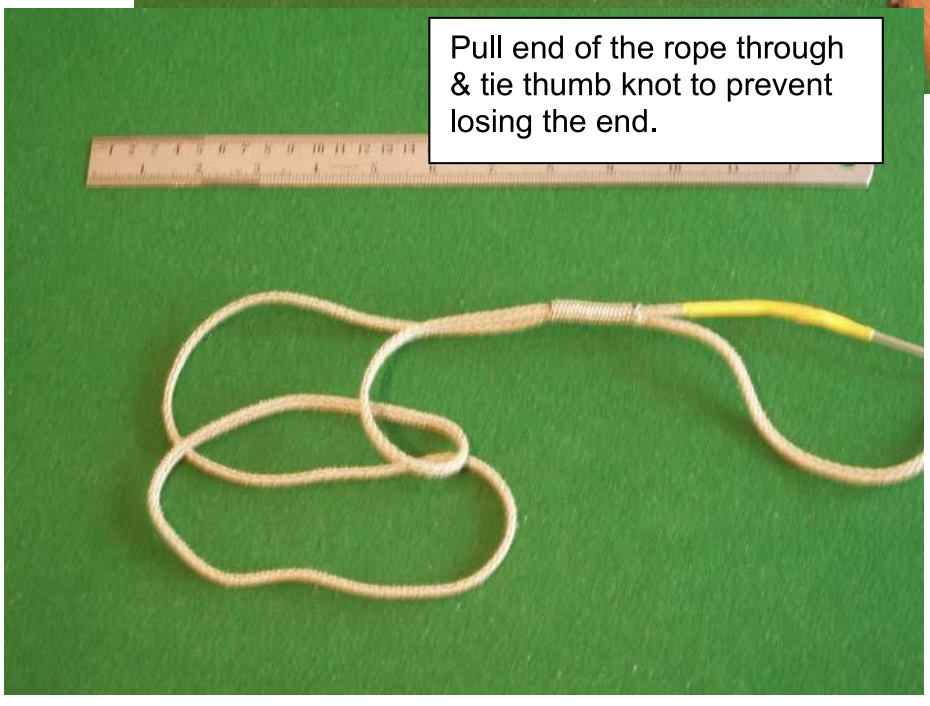

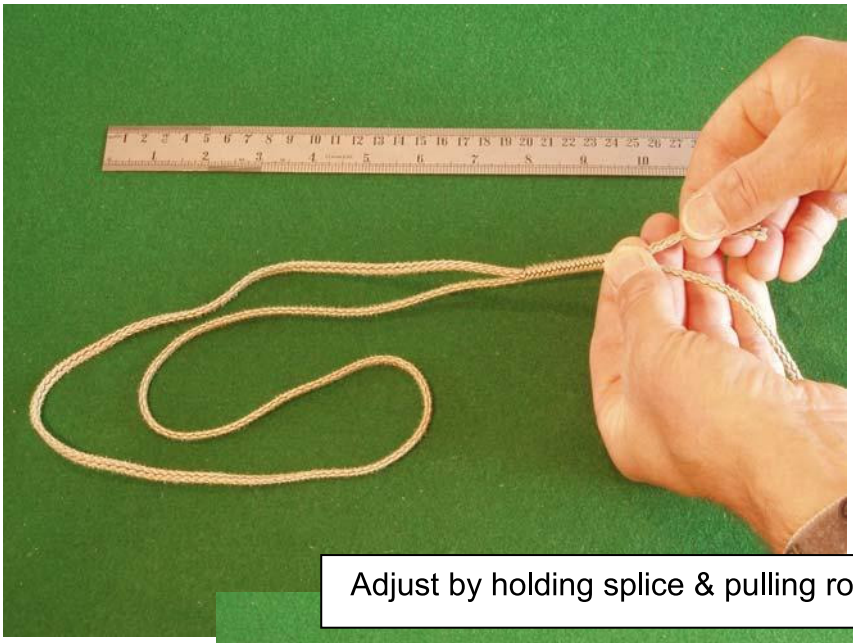

Adjust by holding splice & pulling rope end.

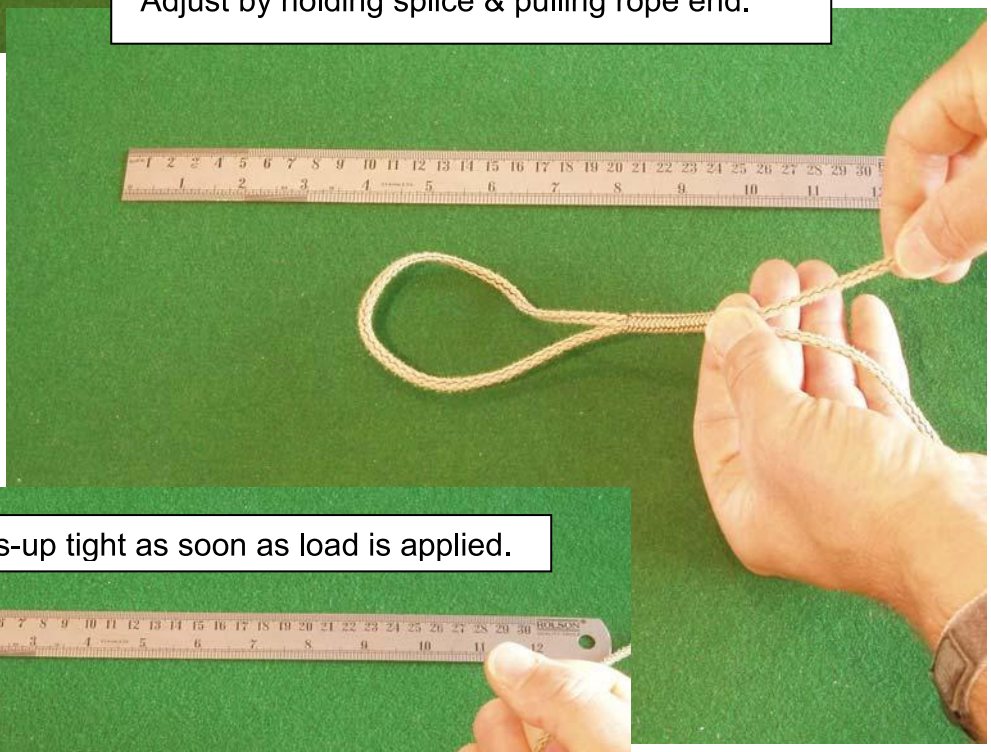

Splice binds-up tight as soon as load is applied.

Note: to convert to fixed splice stitch along the splice to prevent it coming loose.